

Mintt
SMARTPHONES



ULTRAMINTT X3
QUICK START GUIDE

ULTRAMINTT X3
QUICK START GUIDE

Contents

I. CAUTIONS ON MOBILE PHONE USE.....	4
1.1 INTERFERENCE.....	4
1.2 REASONABLE USE.....	4
1.3 QUALIFIED MAINTENANCE SERVICE.....	4
1.4 WATER-RESISTANCE.....	4
1.5 EMERGENCY CALLS.....	4
2 PRECAUTIONS FOR USE OF BATTERY	4
3 CAUTIONS FOR CHILDREN.....	4
II. KEYS AND PARTS	5
III. START TO USE.....	6
1 TO INSERT SIM CARD(S):.....	6
2 CHARGE THE BATTERY	7
IV. BASIC FUNCTIONS.....	8
1 LOCK AND UNLOCK THE SCREEN.....	8
2 MAKE IT YOURS.....	9
4 MAKE A CALL	16
5 CALL LOG.....	17
6 ANSWERING PHONE CALLS AND REJECTION.....	18
7. ADD A CONTACT.....	19

8. SEND AND RECEIVE MESSAGE(S)	20
9. BROWSE THE WEB	22
10. ENJOY MUSIC	22
11. DOWNLOAD APPLICATIONS FROM PLAY STORE	23
12. MANAGE APPLICATIONS	24
13. APPLICATIONS & UTILITIES	25
V. TECHNICAL INFORMATION	27

I.Cautions on mobile phone use

1.1 Interference

All phones may be subject to interference, which can affect phone calls.

1.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

1.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

1.4 Water-resistance

Your device is not water resistant. Keep it dry.

1.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dial icon.

2 Precautions for use of battery


2.1 Do not dispose of batteries near or in a fire to avoid dangers.

2.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

II. Keys and parts

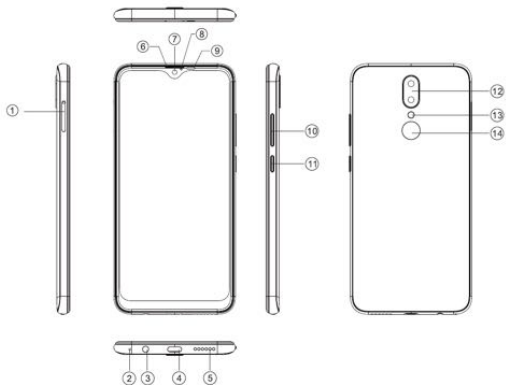

- 1. SIM Card Tray
- 2. Mic
- 3. Audio Jack
- 4. USB Port
- 5. Speaker
- 6. Ringtone
- 7. Front Camera
- 8. Proximity Sensor
- 9. Light Sensor
- 10. Volume Key
- 11. Power Key
- 12. Rear Camera
- 13. Flash Light
- 14. Fingerprint


III. Start to use

1 To insert SIM card(s):

Insert the SIM card correctly in the card slot(s) (See figure below), suggest switch off the phone before you insert SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone before you insert SIM card.

Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

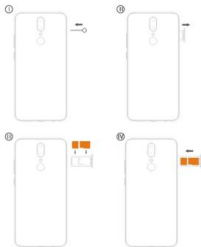

2 Charge the battery

During charging, the battery indicator on the phone is a lightning icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen says 'Battery is full', lightning icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display ' Battery is full '. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.


Unplug the charger from the AC electrical outlet and disconnect the cable between the phone and the charger after charging.

Caution: Charge the phone in a well ventilated place in which the temperature is between -10°C to $+55^{\circ}\text{C}$. Use the charger provided by the manufacturer only. The use of incorrect charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

IV. Basic functions

1 Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag to up direction for unlock.

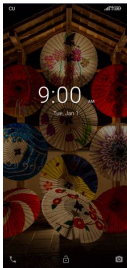


2 Make it yours

1. Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper




2. Long press Home screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then release your finger hold.

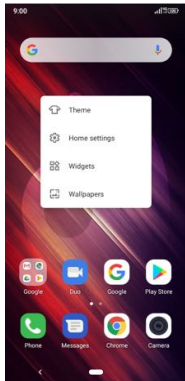


Long press and hold the widget or icon you want to move. Once the phone vibrates, don't release your hold on the icon. Drag the widget or icon to a new location on the screen. Press and hold on an icon till the phone vibrates, and drag the widgets or icon to the trash to remove!




Swipe left and enter application list

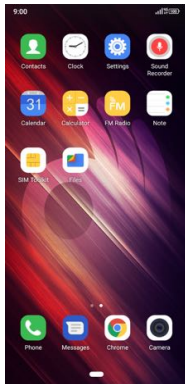


3. Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing "Back"

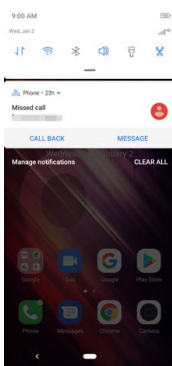

4. If you connect your phone to PC via USB, you can find the USB options, choose Media device (MTP) option you can see your phone memory in PC, this is the same function as USB storage.

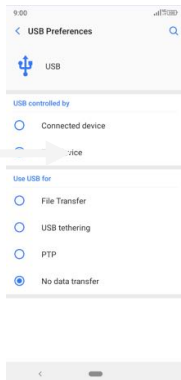

3 Switch to Recently Used Application Press home key.

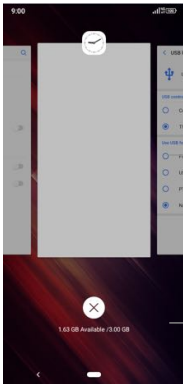


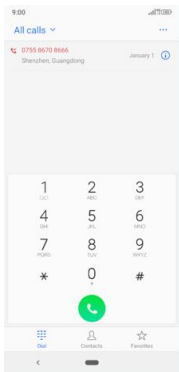
Touch and slide this place can choose to open the application history

Touch this icon to close the application history

4 Make a call




Click  and enter a complete phone number to make a call. Your phone supports smart search.



Swipe to right to view Favorite, Call history and Contacts.


5 Call log

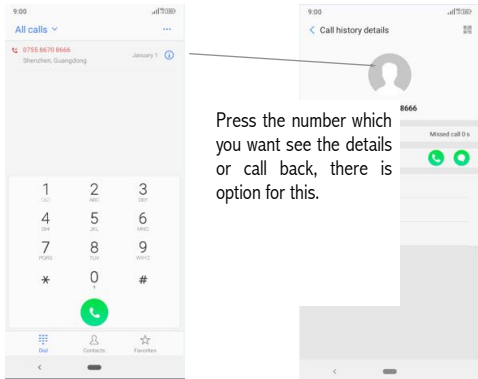

press the number, you can call back, view contact details etc.

6 Answering phone calls and rejection


Although there is a call, you can choose to answer or hang up directly.


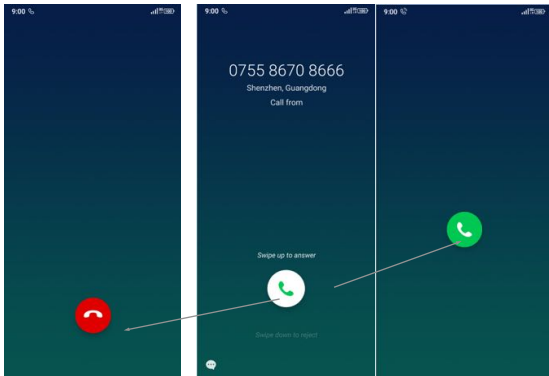


Drag the icon, select the icon to select the answer or hang up.

7. Add a contact


Touch  to enter contact

Touch  to add new contact

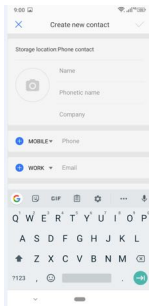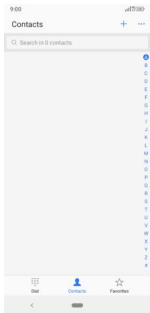

Click here to add new contact and in this page press menu key to enter menu view, setting, etc.


8. Send and Receive message(s)

Touch  to enter messaging, touch to compose new message.



Tap this icon to select desired contact from phone book.


Touch to switch to numerical input and symbols

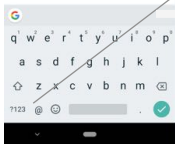

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in green.

Tap  to add "Attach" including Pictures, Videos, Audios, etc to send MMS.SMS

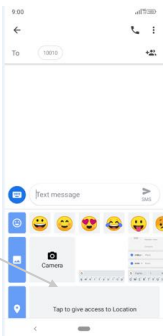

When a new message comes, you can read it by dragging notification panel and click the message, or entering Message to read it directly.

"If you long press on one of the message threads, you can delete that thread".

9. Browse the Web

1. Set up Internet/Data connection


Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

2. Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it to browse the web.


10. Enjoy music

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.

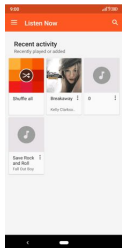



11. Download applications from Play Store

1. Add Google™ account
2. Enter play store and download apps

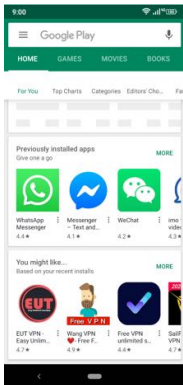

12. Manage Applications

Enter Setting > App.
You can see app info.

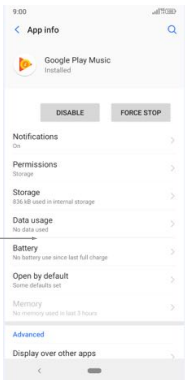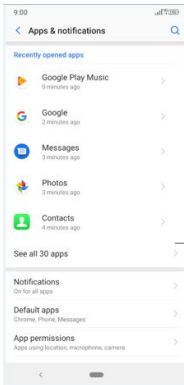

13. Applications & Utilities


For your entertainment, your device is provided with several interesting games, applications and utilities such as Gmail, Email and Play Store.

Tips: With connection to Wi-Fi network, these applications can also run normally.

14. Settings


14.1 Wi-Fi

Open Wi-Fi, search nearby Wi-Fi and connect it, then you can use internet or download apps for free.

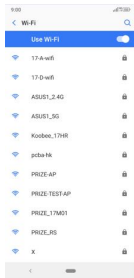

14.2 Bluetooth


Open Bluetooth and connect to another phone, you can then share things like music, photos, movies etc with other people

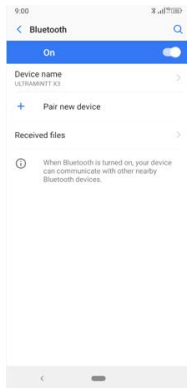

14.3 Security

Screen lock

There are four screen lock you can choose Slide, Pattern, PIN, Password.

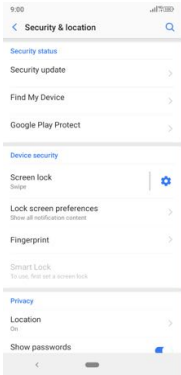

V. Technical Information

Model: UltraMintt X3

Size Length: 155.4*71.8*8.1mm

Battery: 3950mAh (Rated) / 4050mAh (Typical)

Networks:

2G: GSM B2/3/5/8

3G: WCDMA B1/5/8

4G: FDD-LTE B1/3/5/7/8/28A/28B

SAR Value: Head SAR value:

Weight: 163g

Nominal voltage: 3.85V

Max. Voltage: 4.4V

Google, Google Play and other marks are trademarks of Google LLC

Mintt 

Mintt©2019 All Rights Reserved
www.mintt.co

